



Object Type C2G1-※, CB004-※, U2D1-※
CB14-※, C2D1-※, C2X1-※

INSTRUCTION MANUAL

(For Scale Type Load Cells)

Read this instruction manual with care before using this product.
Be sure to observe the important points mentioned in this manual . Keep this manual in custody near by in such a way that you may refer thereto anytime , if required .

The symbols used in this manual are as follows and have the following meanings .

Matters which you must not do absolutely or pay full attention to or keep in mind are marked with the following symbols . Read the sentences marked with these symbols without fail .

| | |
|--|--|
| | NOTE : If this rule is not complied with , a trouble of injury or accident will be , caused , resulting in endangering human body . What is explained here must not be done absolutely . |
|--|--|

| | |
|--|--|
| | This shows an important point or limitation when carrying out operation or doing work . Be sure to read without fail in order to avoid doing in a wrong way . |
|--|--|

1. Preface

Thank you very much for your purchase of MinebeaMitsumi type load cell .
To begin with , check whether or not the delivered load cell has been damaged in transit or its type is correct as specified . If found defective , be sure to contact the agent from which you purchased this product or sales office . Refer to the catalogue or specification for the details of specification of the respective types .

2. Outline


Scale type load cell is a high precision single point type load cell developed for electronic balance for commercial use .

| | | |
|--|-------------|---|
| | NOTE | <ul style="list-style-type: none"> ▪ In case of static loads , use the load cell within the range of rated capacities . In case of dynamic loads , use it less than 70% of the rated capacity . ▪ Do not apply a voltage exceeding the max . applying voltage to the input terminal . ▪ Fit this load cell with hexagonal (holed) bolts . The bolt sizes to be used are mentioned in the catalogue and specification . Select bolts higher than strength class10.9 of JIS B 1051. ▪ Under such circumstances that screws tend to loosen , be sure to retighten them periodically or provide detent if required . ▪ When fitting it to medical machines or apparatuses involving human life , be sure to provide a protective circuit in preparation for functional failure of load cell . ▪ If used under special operating circumstances , be sure to consult with us once before starting use . |
|--|-------------|---|

3. Fitting method

- ① Using hexagonal bolts (holed) , fit the load cell as illustrated hereunder .
Use spring washers for prevention of loosening .
- ② Select fitting bolts higher than strength class 10.9 of JIS B 1051 .
If stainless steel bolts are used , use bolts of strength class 80 of JIS B1054 .
- ③ As for the fitting length of screws , it shall be longer than the nominal diameter of screw .The pedestal must have full rigidity and flat, higher than 25s in surface finish .
- ④ Fit it in such a way that no dust or foreign matter is not held between .
- ⑤ The bolt sizes to be used shall be those mentioned in the catalogue and specification .
- ⑥ The proper tightening torques shall be adopted , referring to the following table .

| NOMINAL DIA .OF BOLT | PROPER TIGHTENING TORQUE(N-m) | |
|----------------------|-------------------------------|----------|
| | (N·m) | (kgf·cm) |
| 4 | 3.92 | 40 |
| 5 | 7.84 | 80 |
| 6 | 13.7 | 140 |
| 8 | 33.3 | 340 |
| 12 | 115 | 1170 |
| 16 | 279 | 2850 |
| 18 | 382 | 3900 |
| 20 | 539 | 5500 |

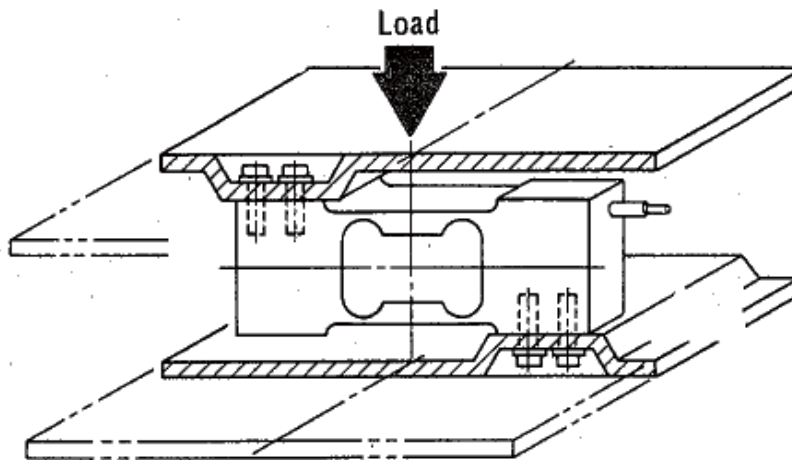

when used for a balance , install it in such a way the center of load cell is in accord with that of the loading plate . Check the size of loading plate , referring to the catalogue or specification .



4. Important points for use

- ① In case of static loads , use it within the range of rated capacities .
In case of dynamic loads , use it less than 70% of rated capacities .
- ② If there should be an impact load or vibration , a dynamic load calculated by multiplying static load by acceleration will act on the load cell .
Therefore , take a measure to prevent the value calculated by taking into consideration acceleration from exceeding the rated capacity of load cell .
- ③ If there is a possibility that an overload will act on load cell , provide a safety device against damage .
- ④ The installing place must have full strength .
- ⑤ Use it in an ambient temperature within the range temperature compensation range .
- ⑥ Be sure to avoid a rapid change in temperature and direct heat .
- ⑦ Checking protecting class , use it in such an environmental condition free from formation of dew .
- ⑧ Under such circumstances where electric and magnetic fields are very strong , noise is generated sometimes .Therefore , avoid using it at such circumstances .
- ⑨ The sensing block (silicon coated part) has s thin wall thickness , resulting in being very easy to be scratched . Therefore , take full care when handling it .
- ⑩ Do not bend the cable lead hole extremely or pull strongly . When carrying it from place to place , do not hold the cable to suspend the load cell .
- ⑪ Under vibrating circumstances , fix the cord in the vicinity of cable lead hole and provide a means for prevention of vibration thereto .
- ⑫ Under such circumstances where screws tend to be loosened , retighten periodically and provide a detent means thereto , if required .
- ⑬ When fitting it to medical treatment machines and other apparatuses involving human life , be sure to provide a protective circuit thereto , in preparation for functional failure of load cell .
- ⑭ Do not disassemble the load cell .
- ⑮ Do not drop any thing on the load cell or give a shock thereto .
- ⑯ When discarded , dispose of it , taking into full consideration the environmental condition .

5. Wirings

- ① Connect the lead wires with the specified terminals of gauges .

| | INPUT | | OUTPUT | | SHIELD |
|----------------------|-------|-------|--------|------|--------|
| | (+) | (-) | (+) | (-) | |
| COLOR OF CABLE LEAD | Red | white | Green | Blue | Yellow |
| STD CONNECTOR WIRING | A | C | D | B | E |

- ② Refer to the operation manual of gauge the terminals of gauges .

6. Trouble shooting

If an overload exceeding the allowable value is applied or if an overload other than center load is applied, be sure to make calibration again in order to check whether it can be used normally. If indication is unstable or abnormal, check whether or not connection with gauge is made correctly and reliably or the important matters in use in item 4 are used properly.

- ① Check whether or not the input/output resistance is within the range of specified values with a tester etc.
- ② Check whether or not the insulation resistance of load cell body and core wires of cord is within the specified range of values.
- ③ Check whether or not the output (zero balance) without load is within the range of specified values.

If the values of the abovementioned measurement are abnormal, be sure to contact our company at once.

If there should be an unknown point in connection method etc., contact our company.

Understand the text of this manual is subject to change without notice.